
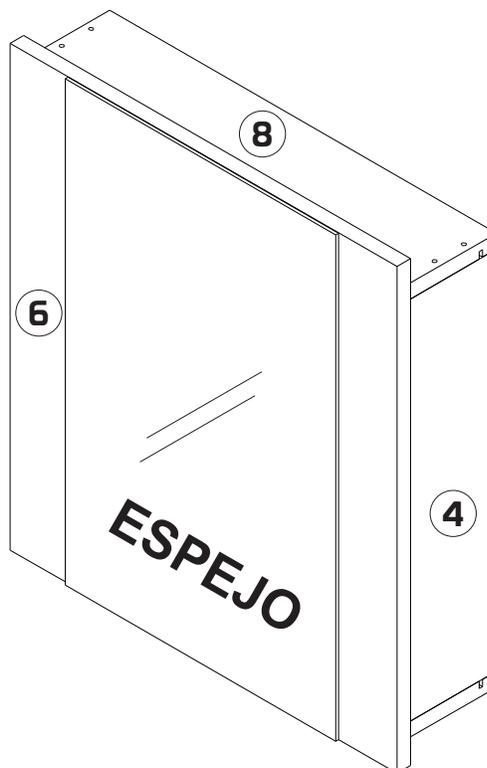
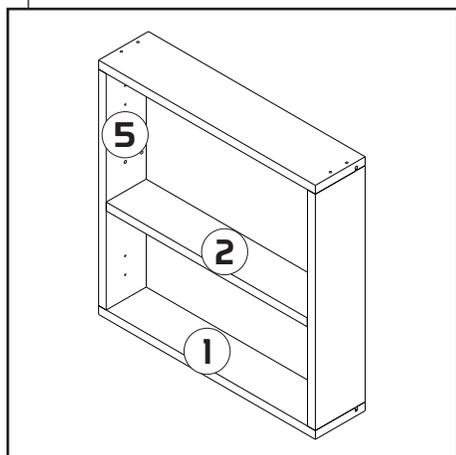



INSTRUCCIONES DE ENSAMBLE

Encuétranos en: www.practimac.com y [YouTube/practimac](https://www.youtube.com/channel/UCpractimac)


GABINETE ESPEJO NIKI P00063GB-WE-E

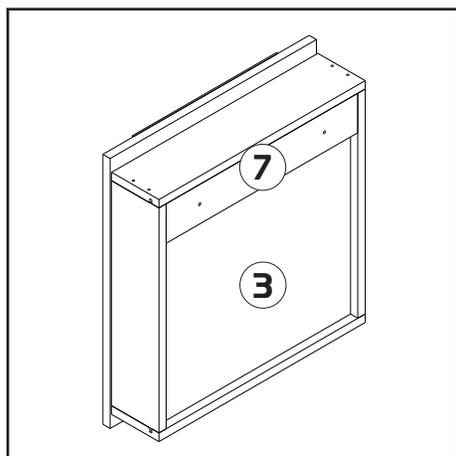


HERRAJES

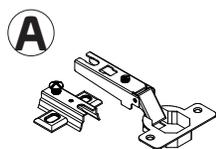


2 Und.
Bisagra mini parche
26mm
0023329

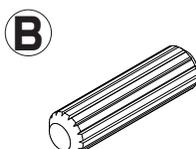


6 Und.
Tarugo 8x30
20030001

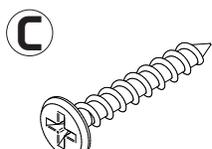


8 Und.
Tornillo 6x1" 1/2 ave
phi auto perforante
20020041

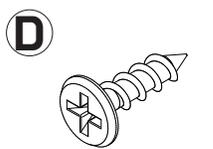


8 Und.
Tornillo 6x5/8 ave
phi zinc aglomerado
0004705

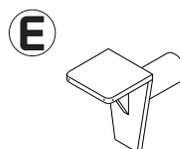


4 Und.
Soporte entrepaño
a presión
20060014

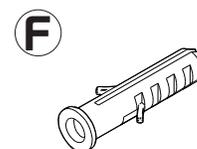

2 Und.
Chazo plástico de
5/16
0004628

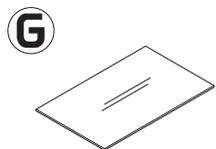

1 Und.
Vidrio 3mm pul-br.
296x480 espejo crist.
(Pre-ensamblado)
0004074

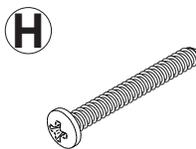


2 Und.
Tornillo 10x2" ave
phi zinc
0004629

 **Practimac**
tu espacio, tu vida.

RECOMENDACIONES DE ENSAMBLE

Nivelación de las puertas

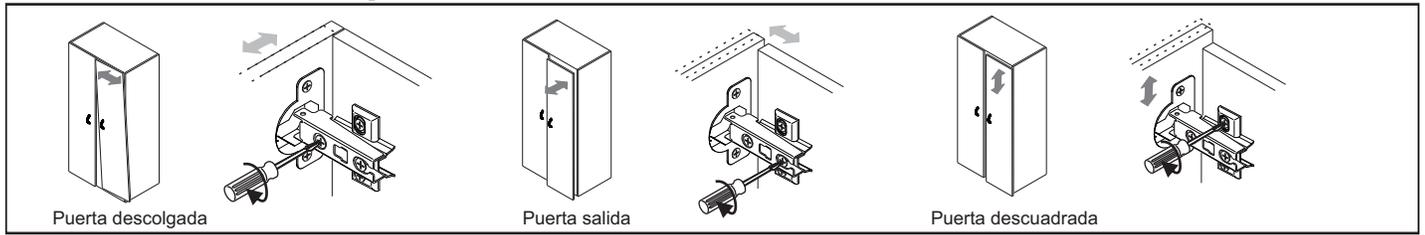

Tarugos

